




install pump horizontally

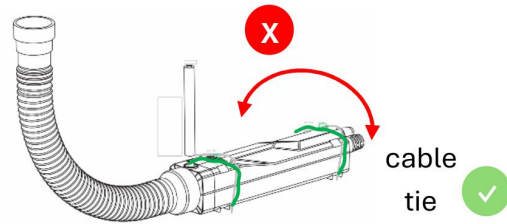


fix pump to prevent turning

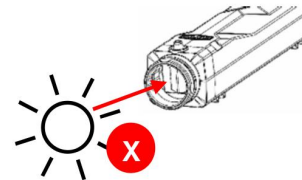


no direct sunlight onto sensor

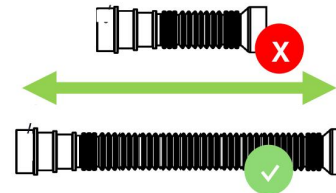


tip: extend possible hose to maximise the water reservoir

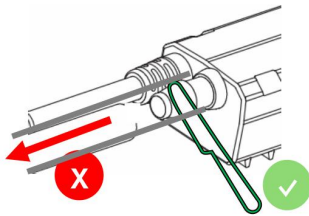


remove PVC tube with knife, do not pull

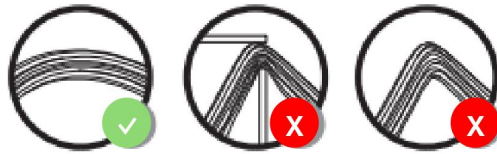

no hose kink

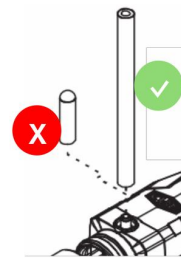


do not close reservoir with the cap, use open vent tube

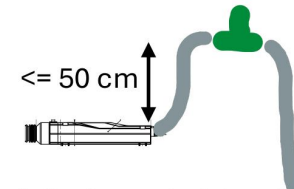


tip: good discharge height of 50 cm helps, but do not make much extra height



use filter in possible hose

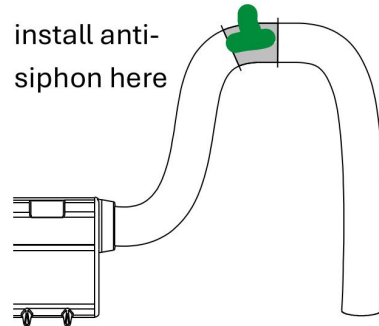

install anti-siphon here

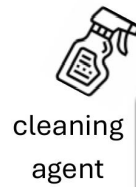

cleaning agent



disconnect pump before




H₂O



purge before reconnecting pump

Do you hear a clicking sound when plugging in the pump?


check the alarm relay

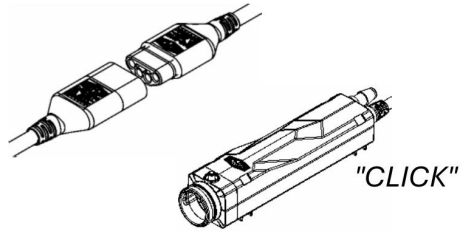

No clicking? → Pump defect → replace it

Does the pump start?

connect the pump

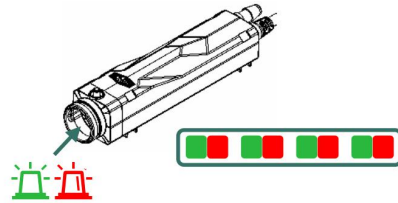

use a different cable

Sensor active? (without water)

wait for it to power on



When turning it on, does the pump immediately go into a strong alarm pumping?


check sensor function



Clean the sensor + repeat

Does the sensor detect water?


check sensor function

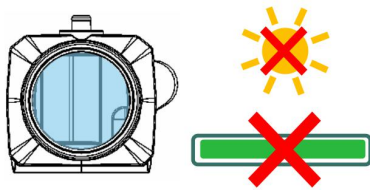

no direct sunlight!
Clean the sensor + repeat

Is the water gone, but the pump is still running?


check sensor function

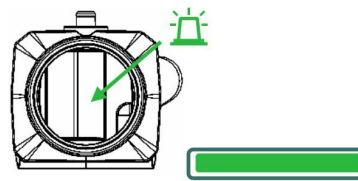

Clean the sensor + repeat


Sensor detects water, but the pump doesn't pump?

check internal pump

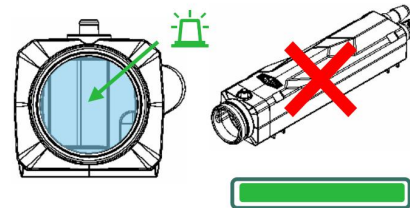

Internal pump defect

Sensor cleaning

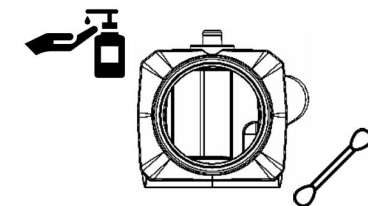

Use soapy water and a cotton swab to clean the sensor.
Wash off with clear water at the end.